



INSTALLATION INSTRUCTIONS TRANSMISSION SENSOR

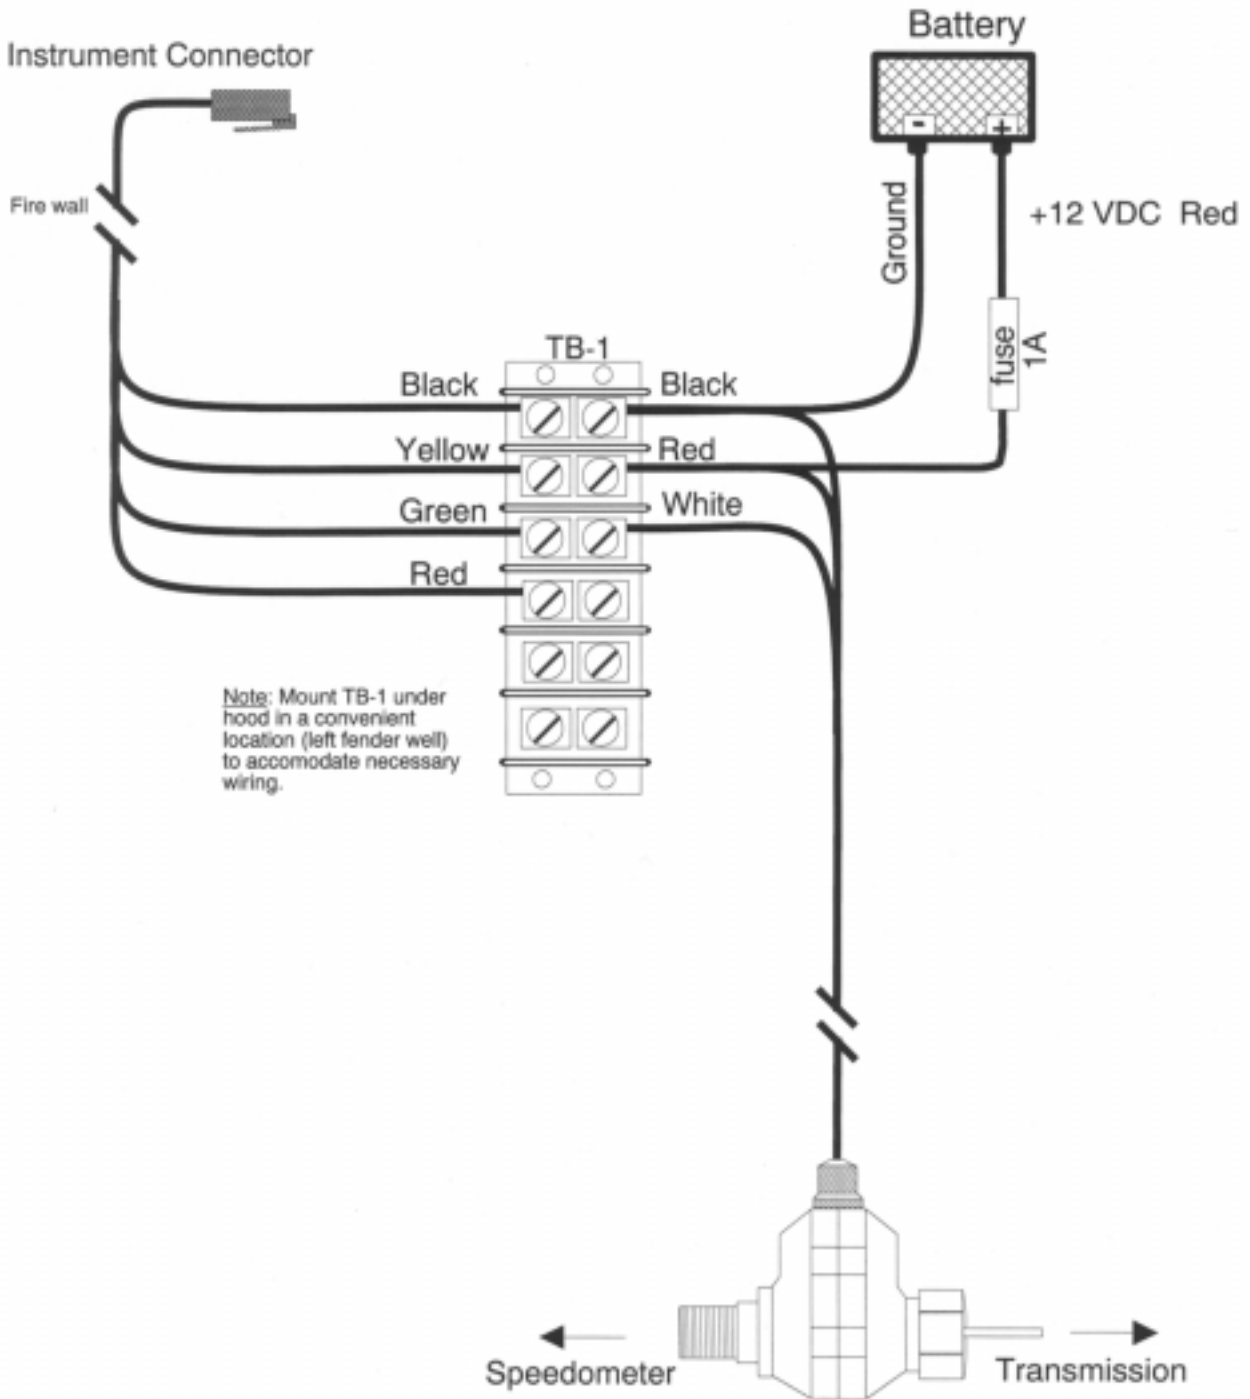



RAC-M METRIC ADAPTER KIT

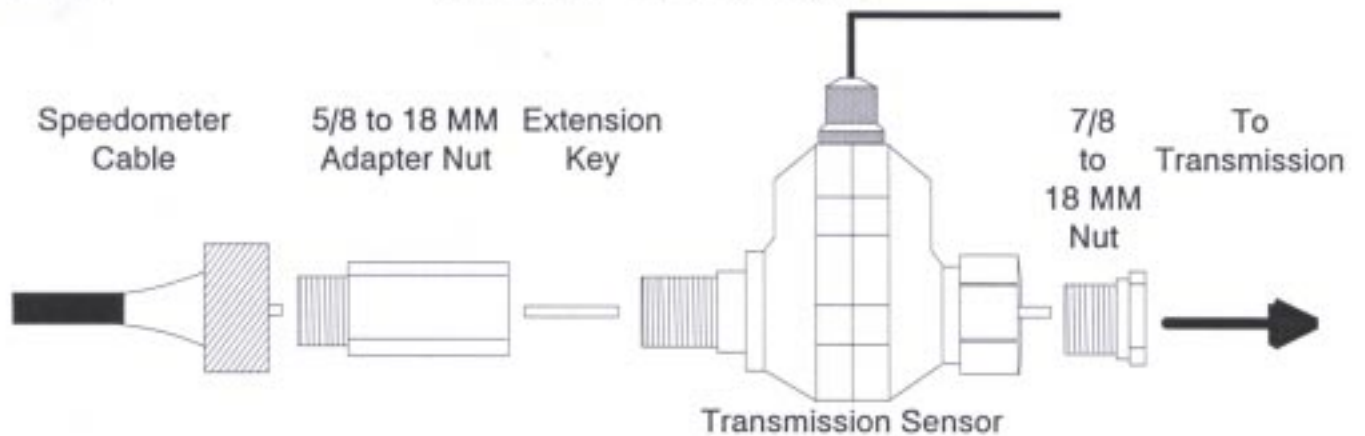

1. Screw the 7/8 to 18 MM Adapter Nut into the female end of the Transmission Sensor.
2. Screw the 5/8 to 18 MM Adapter Nut onto the male end of the Transmission Sensor.
3. Unscrew the speedometer cable from the transmission, and screw the Transmission Sensor onto the vehicle's transmission.
4. Place the Extension Key into the 5/8 to 18 MM Adapter Nut, and screw the speedometer cable onto the Adapter Nut.